

XactView



What is the XactView Module?

The XactView module provides an easy-to-use GUI for editing the XactView server settings on your PBX. In general, XactView is purchased with the PBX and you won't need to change these settings. XactView is a desktop application that allows you to interact with your [PBXact UC](#) phone system. With XactView you have complete control over all phone calls. You can view calls, transfer calls, change presence, park calls, manage conference bridges and queues, monitor and record calls, and more.

How do I Access the XactView Module?

- On the top menu click **Admin**
- In the drop down click **XactView**

How do I use the XactView Module?

See the [XactView Module User Guide](#)