


# Supported Devices-Obihai

- OBi 100, 110, 200, 202, 300 & 302
  - How to Find the IP Address
  - How to Find the MAC Address
  - How to Set the Configuration Server
  - How to Restore Factory Default

## OBI 100, 110, 200, 202, 300 & 302

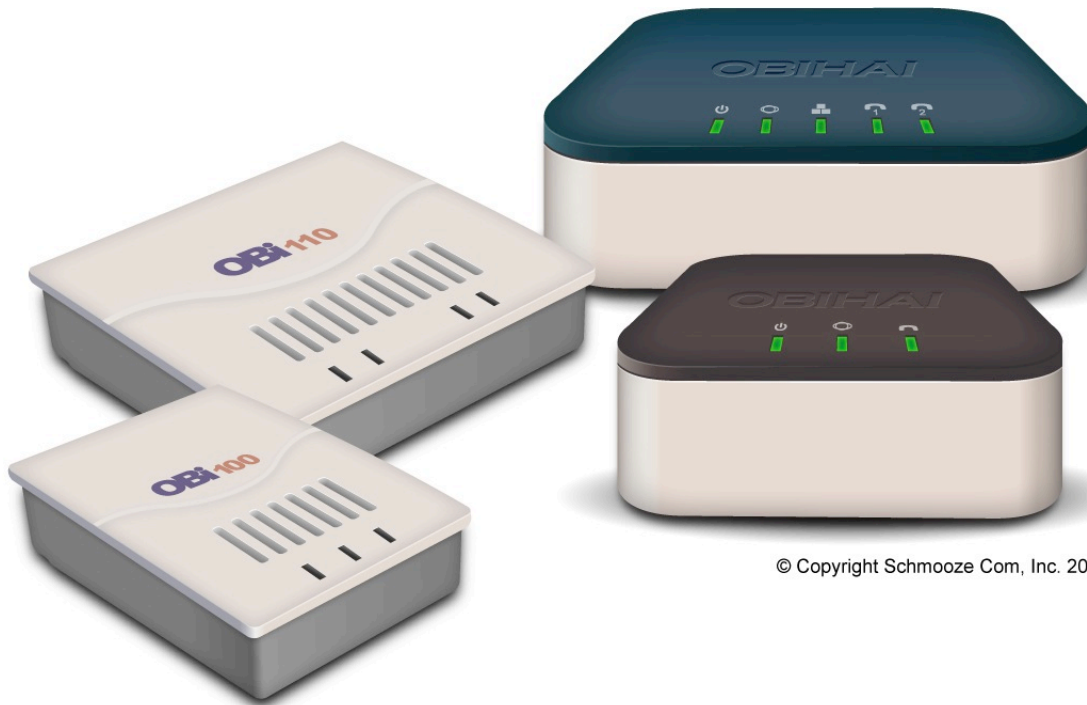

© Copyright Schmooze Com, Inc. 2014

## How to Find the IP Address

1. Pick up the connected handset and dial \*\*\* to access configuration options from the IVR main menu.
2. Dial 1.

## How to Find the MAC Address

1. Enter the IP Address into a local web browser address field.

- When prompted, enter "admin" as the user name and "admin" as the password.

The server 10.10.0.1 requires a username and password.  
The server says: admin@OBi100.

User Name:

Password:

- On the main System Status page you can see the MAC Address.

**OBIHAI**  
technology, inc.

**System Status**

**WAN Status**

Parameter Name	Value	
AddressingType	DHCP	?
IPAddress	192.168.15.84	?
SubnetMask	255.255.255.0	?
DefaultGateway	192.168.15.1	?
DNSServer1	4.2.2.2	?
DNSServer2	8.8.8.8	?
MACAddress	9CADEF003D13	?

**Setup Wizard**

- Status
- System Management
- Service Providers
- Voice Services
- Physical Interfaces
- Codecs
- Tone Settings
- Ring Settings
- Star Codes
- User Settings

## How to Set the Configuration Server


- Enter the IP Address into a local web browser address field.
- When prompted, enter "admin" as the user name and "admin" as the password.

The server 10.10.0.1 requires a username and password.  
The server says: admin@OBi100.

User Name:





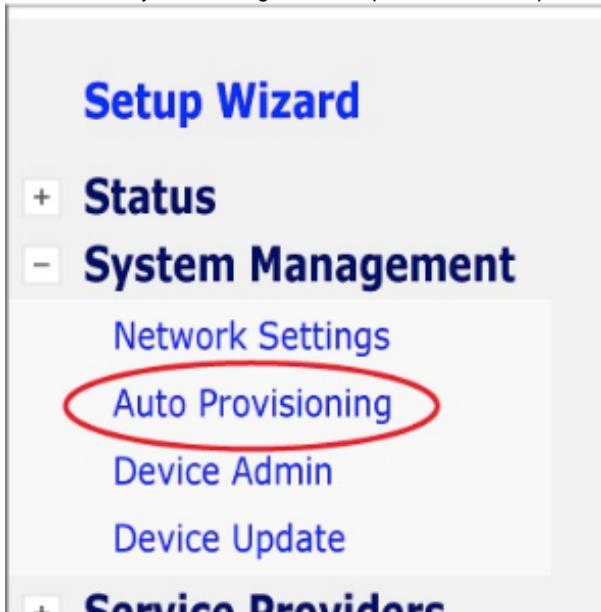

Password:

3. Click on the "System Management" dropdown from the options on the left and select "Auto Provisioning."



4. In the "ConfigURL" field, paste your IP Address between the last two backslashes. 10.10.0.1 is used in our example.

### ITSP Provisioning

Parameter Name	Value	Default	
Method	System Start	<input checked="" type="checkbox"/>	
Interval	0	<input checked="" type="checkbox"/>	
ConfigURL	tftp://10.10.0.1/\$DM.xml	<input checked="" type="checkbox"/>	
GPRM0		<input checked="" type="checkbox"/>	
GPRM1		<input checked="" type="checkbox"/>	
GPRM2		<input checked="" type="checkbox"/>	

5. Press the "Submit" button at the bottom of the page.



## How to Restore Factory Default

1. Pick up the connected handset and dial \*\*\* to access configuration options from the IVR main menu.
2. Dial 8.
3. Press 1 to confirm device restore to factory default settings.
4. Press # to return to the device configuration menu.
5. Press ## to exit the IVR.