

# Generating ringback tone to incoming callers ( for ISDN to SIP calls)

## Problem

Generate ringback tone over ISDN lines for incoming calls.

## Solution

hen customer having an issue where incoming calls from t1 pri are not being sent a ringback tone and if it is required that the Vega generates these progress tones on the TE ISDN interface, then at the CLI prompt type:

```
set _advanced.isdn.user_progress=1
```

Save and reboot Vega to activate the changes.

Notes:

1. If the Vega DSL is configured as NT it will always generate the call progress tones. E.g. ringback and disconnect tones.
2. Typically wait\_for\_connect and user\_progress configuration parameters should either both set to 1 or both set to 0.

[ftp://ftp.sangoma.com/vega/legacy/1-step-by-step-configuration/Base%20documents/Initial%20config%20-%20R6%20Vega%20100%20E1%20\(SIP\)\\_06.pdf](ftp://ftp.sangoma.com/vega/legacy/1-step-by-step-configuration/Base%20documents/Initial%20config%20-%20R6%20Vega%20100%20E1%20(SIP)_06.pdf)